



© 2015 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204, Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E) Mumbai 400 072, India. 2 Year Limited Warranty - see inside for details. Sunbeam Products, Inc. and Jarden Consumer Solutions of India Private Limited are subsidiaries of Jarden Corporation (NYSE: JAH). 1-800-102-6300

[www.oster.in](http://www.oster.in)

## WARRANTY CARD

Model No. : \_\_\_\_\_

Date of Purchase : \_\_\_\_\_

Dealer's Stamp : \_\_\_\_\_

Printed in P. R. C.  
CKSTPM129-049\_15EM1

P.N. 9100990000380  
GCDS-OST37916-BB



MODEL CKSTPM129-049

## INSTRUCTION MANUAL PANINI MAKER/GRILL

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS BEFORE USE.
2. Check if the voltage indicated on the appliance corresponding to the local mains voltage before you connect the appliance.
3. Verify that the voltage in your home corresponds to that of your appliance.
4. DO NOT touch hot surfaces. Use handles or knobs.
5. To protect against electrical shock do not immerse the cord, plug, temperature controller or the appliance in water or other liquid.
6. Close supervision is necessary when any appliance is used by or near children.
7. Unplug from outlet and allow to cool when not in use, before cleaning, and before putting on or taking off parts
8. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
9. Do not use outdoors or for commercial purposes.
10. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or cause injury.
11. DO NOT let the cord hang over the edge of a table or counter, or touch hot surfaces.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT use the appliance for other than intended use.
14. Do not intend to operate by means of an external timer or separate remote-control system.
15. Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids
16. Do not use on plastic or synthetic tablecloths or any unstable surface or near flammable goods including curtains, draperies, walls, and the like, as fire may occur.
17. Never impact this unit or drop from high place.
18. DO NOT touch the plate surface while in use or before cooling down, even when the power is switched off.
19. DO NOT touch the stainless steel cover during use. HOT SURFACE!
20. Do not use metal utensils on the cooking plate, as they will scratch the non-stick coating.

21. To disconnect, turn temperature control to MIN setting and unplug cord from outlet.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
23. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
24. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.


## This unit is intended for household use only

This appliances is for HOUSEHOLD USE ONLY. No user-serviceable parts inside. Do not attempt to service this product. Do not immerse base in water or other liquid.

## SAVE THESE INSTRUCTIONS

Thank you for purchasing the Oster™ Panini Maker/Grill. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. To learn more about Oster™ products, please visit us at [www.oster.in](http://www.oster.in) or call us at 1-800-102-6300.

## DESCRIPTION OF THE APPLIANCE

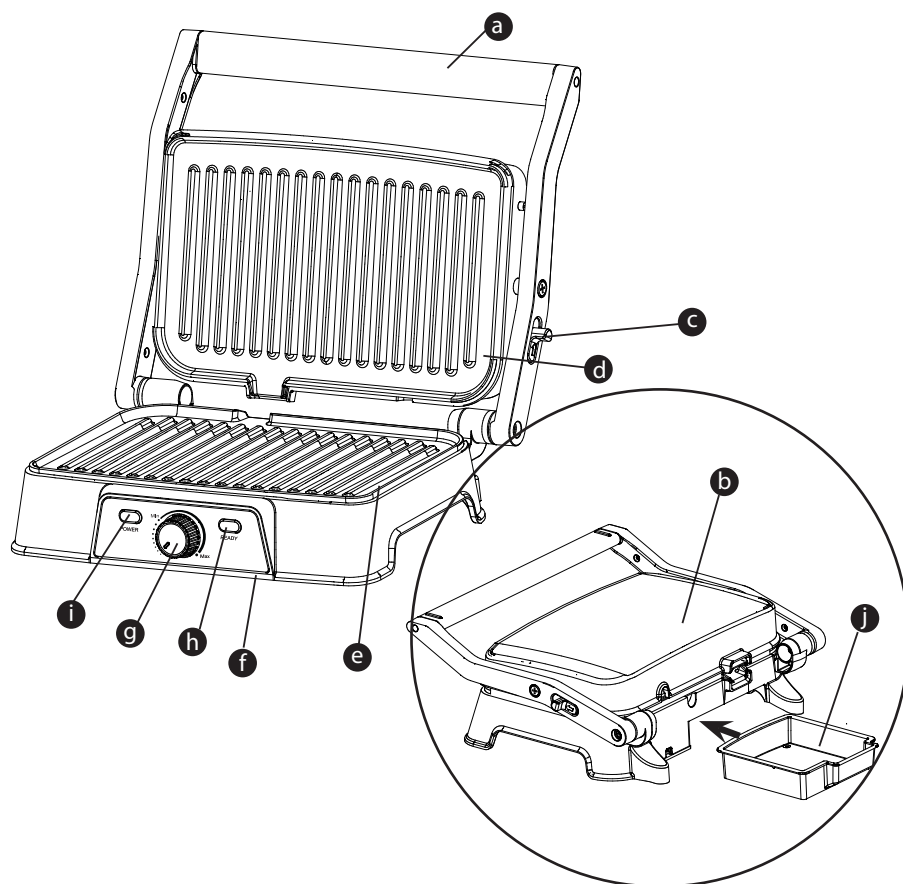

- |  |                             |
|--|-----------------------------|
| <b>a</b> Handle                        | <b>f</b> Bottom Housing     |
| <b>b</b> Stainless Steel Upper Housing | <b>g</b> Thermostat Control |
| <b>c</b> Grill/Griddle Release Switch  | <b>h</b> Green Ready Light  |
| <b>d</b> Upper Grill Plate             | <b>i</b> Red Power Light    |
| <b>e</b> Lower Grill Plate             | <b>j</b> Drip Tray          |

## Before First Use

Before using the appliance for the first time, remove and peel off any promotional materials and packaging materials, and check that the cooking plates and accessories are clean and free of dust. Read entire instruction manual for a full understanding of your new appliance.

- 1 Clean the grill, plates (see "Cleaning and Care"). It is recommended to heat up the grill for about 10 minutes without any food in order to eliminate any grease that may have adhered during the manufacturing process.
- 2 Ventilate the room during this period. When your Panini Maker/Grill is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

## Operation

**Note:** Ensure that the cord is kept well away from the cooking surfaces at all times while in use or when the unit is hot.

- With the thermostat set to "Min", plug the appliance in. The red power light and green ready light will light up.
- Apply a little oil on the cooking plate. Turn the knob to desired temperature level. Preheat the grill to reach the ideal cooking temperature. When the appliance reaches the desired temperature, the green ready light will go off.

**Note:** Green ready light may turn on and off during cooking. This indicates that the thermostat is maintaining the proper cooking temperature to grill to perfection.

- Ensure the drip tray is properly inserted and placed on the back of the appliance. (see Page 4 for illustration).

**WARNING:** THE METAL TOP COVER GETS VERY HOT. KEEP HANDS AND OTHER OBJECTS AWAY FROM IT. ALLOW THE UNIT TO COOL OFF COMPLETELY FOLLOWING OPERATION (USUALLY APPROXIMATELY 40 MINUTES) BEFORE TOUCHING THE PLATES OR HOUSING.

## To Use as a Contact Grill:

The Contact Grill can be used to cook items such as burgers (including but not limited to hamburgers, veggie burgers, turkey burgers, etc), boneless pieces of meat and thin cuts of meats and vegetables.

- 1 Plug in the unit.
- 2 Set the Thermostat Control to your desired setting. At first, try a setting near the "Max" setting. You may adjust it lower or higher according to your preference.
- 3 Ensure the drip tray is properly inserted and placed on the back of the appliance in order to catch the grease.
- 4 Insert your desired food onto the bottom cooking plate. Ideally make sure your foods are approximately the same height, as the lid will need to press on the top of the food in order to cook it evenly.
- 5 Close the top cooking plate. The top plate must be fully lowered to achieve Grill marks on the selected foods. The green ready light will illuminate until the food is cooked in 3-8 minutes, you may stop cooking when the food reaches golden brown or adjust cooking time to fit your desired taste.
- 6 When the food is cooked use the handle to open the lid. Remove the food with the help of a plastic or wooden spatula. DO NOT use metal utensils for any reason as these will scratch the non-stick coating on the plates.

**Note:** The ribs on the grill plates, combined with the grease spout at the rear side of the plate, allow the grease to drip from the food and drain off the plates.

### To Use as a Panini Grill/Press:

The Panini Grill can be used to cook items such as grilled sandwiches, breads and quesadillas.

- 1 Plug in the unit.
- 2 Set the Thermostat Control to your desired setting. At first, try a medium setting (temperature setting midway between MIN and MAX). You may later adjust it lower or higher according to your preference.
- 3 Ensure the drip tray is properly inserted and placed on the back of the appliance in order to catch any grease that might drip.
- 4 Insert your desired food onto the bottom cooking plate. Make sure your foods are approximately the same height as the lid will need to press on the top of the food in order to cook it evenly. To ensure proper and uniform grilling, when cooking more than one food item in the grill, it is important for the thickness of all food items to be consistent, so that the cover will close evenly on the food.
- 5 Close the top cooking plate. The top plate must be fully lowered to achieve grill marks on the selected foods. The green ready light will illuminate until the food is cooked in 3-6 minutes, you may stop cooking when the food reaches golden brown or adjust cooking time to fit your desired taste.
- 6 When the food is cooked use the handle to open the lid. Remove the food with the help of a plastic or wooden spatula. DO NOT use metal utensils for any reason as these will scratch the non-stick coating on the plates.

**Note:** The ribs on the grill plates combined with the grease spout at the rear side of the plate allow the grease to drip from the food and drain off the plates.

### To Use as an Open Grill:

The Open Grill can be used to cook items such as burgers, steak, poultry (it is not recommended to cook chicken parts with bones, as they might not cook evenly), hot dogs, fish and vegetables.

- 1 With the unit UNPLUGGED, open the unit to the 180 degree/flat position using the Grill Release Switch.
- 2 Plug in the unit.
- 3 Select your desired temperature on the Thermostat Control.
- 4 Ensure the drip tray is properly inserted and placed on the back of the appliance in order to catch any grease that might drip.
- 5 Place your desired foods on to the top and bottom cooking plates. Your grilling surface has doubled when you use the Open Grill position. Feel free to cook up different foods at the same time and don't worry about mixing flavors since they are on separate plates! The green ready light will illuminate until the food is cooked in 3-6 minutes, you may stop cooking when the food reaches golden brown or adjust cooking time to fit your desired taste.
- 6 When the food is cooked, remove the food with the help of a plastic or wooden spatula. DO NOT use metal utensils for any reason as these will scratch the non-stick coating on the plates.

**Note:** The ribs on the grill plates combined with the grease spout at the rear side of the plate allows the grease to drip from the food and drain off the plates.

### Helpful Hints

- Frozen food should always be thawed before it is grilled.
- If you grill vegetables, fish or lean meat, spray the grilling surface with a cooking spray. If you are grilling meat with any amount of fat, or if the food has been marinated, there is no need to treat the grill prior to cooking.
- Never use metal utensils – they will scratch the non-stick plates.
- Do not leave plastic utensils in constant contact with the hot grill plates. They could melt.
- Do not touch unit for at least 45 minutes after use to ensure the unit has cooled down. When in doubt always use an oven mitt.

## CARE & CLEANING

### Taking Care of Your Panini Maker/Grill

- After use be sure the Thermostat Control is fully turned to counter-clockwise until the unit is off.
- Unplug the unit from the power and let the appliance cool down for at least 45 minutes before cleaning. If you are unsure if the unit is hot be sure to use an oven mitt.
- Wipe the grill/griddle plates with a soft cloth to remove food residue. For baked on food residue, squeeze some warm water mixed with detergent over the food residue, then clean with a non-abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Wipe the outside of the unit with a damp cloth, sponge or paper towel.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use hard, sharp utensils. Plastic utensils are the best if you find you need to scrape leftover food from the unit.
- Make sure no water or other liquid penetrates into the appliance.
- DO NOT place unit in the dishwasher.
- NEVER clean or rinse the appliance under running water.
- DO NOT immerse electrical parts and base appliance in liquids.

### Storage

- Always unplug the unit before storage.
- Always make sure the unit is cool, clean and dry before storing.

## WARRANTY

Jarden Consumer Solutions of India Private Limited (hereinafter referred to as "JCS") warrants that, for a period of two (2) years from the date of purchase of this product as evidenced in the cash memo ("Warranty Period"), this product will be free from defects in material and workmanship (the "Warranty"). Please preserve the warranty card and the cash memo of the product duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the Warranty Period, JCS, at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through (the dealer from whom the product was purchased or through the service center listed in the card – business people to confirm), provided that:
  - JCS is promptly informed of the defect;
  - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by JCS;
  - This Warranty, duly filled, stamped and signed by the dealer is made available.
- The Warranty provided herein is towards the original purchaser and is not transferrable to any third party.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- This Warranty is in lieu of all others expressed or implied and does not cover the following:
  - a. If product was use in any manner other than the intended use.
  - b. If the product has not been used according to the instruction manual/user's manual, included with the product.
  - c. If the defects are caused by improper use or reckless use.
  - d. If the product was altered or repaired by anyone other than those authorized by JCS.
  - e. If installation of the product is not done as per the printed instructions provided along with the product.
  - f. If the defects are caused by fire, flood, and other act of god.
  - g. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
  - h. Normal wear and tear of parts and accessories resulting from regular use.
  - i. Damage resulting from transportation, accidents, mishandling or negligence on the part of the consumer.
  - j. The following part/components:
    - Broken glass or ceramic parts
    - Light bulb
    - Accessories
  - k. If the product is put to industrial or commercial use.
    - JCS will not be responsible for any delay in servicing due to non-availability of any components or due to reasons beyond the control of JCS.
    - Any failure of the product to perform any purpose other than the intended purpose shall not be considered as a default under this warranty.
    - In any event, if JCS becomes liable for damages incurred in connection with these presents, then the liability of JCS will be limited to the amount equal to the sale invoice amount paid by you.

Waste electrical products should not be disposed off with household waste. Please recycle where facilities exist.

## AUTHORIZED SERVICE CENTERS

Region	State	City	Name	Address	Contact Person	Contact No.
East	West Bengal	Kolkata	Jeeves Consumer Services Pvt Ltd	356, Jodhpur Park, Kolkata - 700068	Someswar Basu	(033) 40012100
	West Bengal	Kolkata	Southern Service	6/19A, Prince Anwarshah Road, Poddar Nagar, Kolkata - 700068	Subrata Manna	(033) 24729651 / 65488822
	West Bengal	Kolkata	Baishanu Service Care	55D, Adaya Nath Saha Road, Lake Town, Near Jaya Cinema, Kolkata - 700048	Piyush Nandan	(033) 40664210
	West Bengal	Howrah	Time n Service	37 & 38, Mohenath Lane, Salkia, Howrah - 711106	Tapas Hazra	(033) 65639720
	West Bengal	Hooghly	DNP Enterprises	52, Sahaganj Main Road, PO. Sahaganj, Near Bandel Station, Hooghly - 712104	Indrajit Bag	(0) 9163668360
	West Bengal	Barrackpore	Balaji Enterprise	4/E/A Barasat Road, Barrackpore, Dist. North 24 Parganas, Near 15 No. Rail Gate, Barrackpore - 700122	Pradip Kr Ghosh	(033) 25451224
	West Bengal	Siliguri	S D Electronics	Deys Lodge, 138/69/57, Nazrul Sarani, Ashrampara, Siliguri - 734001	Arup Dey	(0353) 2526028
	West Bengal	Asanol	Yes Service	Hutton Road, Near Mahal Banquet Marriage Hall, Asanol - 713301	Sarfraz Ahmed	(03228) 2280029
	Assam	Guwahati	Multi Track Services	G S Road, Ground Floor, Bora Service Station, Ulubari, Guwahati - 781007	Kallol Dutta	(0361) 2457296



## AUTHORIZED SERVICE CENTERS

North	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	# E-10, Arya Samaj Road, School Road, Uttam Nagar, Delhi - 110059	Md Khalid Pervez	(011) 45785915
	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	R-32, 2nd Floor, Vikas Marg, Shakarpur, Opp. Heera Sweets, Metro Pillar # 46, Delhi - 1100092	Manjeet Singh	(011) 47754764
	Delhi	Delhi	S T Services	M-131, 1st Floor, Guru Harkrishan Nagar, Paschim Vihar, New Delhi - 110041	Vipin Yadav	(011) 32958438 / 45586987
	Haryana	Gurgaon	Jeeves Consumer Services Pvt Ltd.	4/18 A, 1st Floor, Laxmi Garden, Behind Police Chowki, Khandsa Road, Gurgaon-122001	Karamvir Fogaat	(0124) 4073434
	Haryana	Faridabad	Jeeves Consumer Services Pvt Ltd.	5H-49, 1st Floor, NIT Faridabad -121001	Manoj Kumar Panwar	(0129) 4163003
	Uttar Pradesh	Noida	Jeeves Consumer Services Pvt Ltd.	1st Floor, Above Punjab ATM, Sector-22, Chaura More Main Road, Near Oriental Bank of Commerce, Opp.Rajkiya Inter College, Noida, U.P. - 201301	Devender Singh	(0120) 4162644
	Uttar Pradesh	Lucknow	Swastik Customer Care	A-1/3, SEC-H Aliganj, Near Kendriya Bhawan, Lucknow - 226020	Uma Shankar Mishra	(0522) 3298003 / 4102581 / 4102582
	Uttar Pradesh	Kanpur	Shubham Electronics	192, Manohar Nagar Barra -3, Opp Deepshika Guest House, Kanpur - 208027	Suman Gupta	(0512) 2283394 / 2602029
	Uttar Pradesh	Agra	Sai Electronics	25/113, Gandhi Nagar, Agra - 282 003	Ajay Singhal / Sunil	(0562) 3297005
	Haryana	Ambala	Telecare	Old Hospital Road, Bara Thakur Dwara, Opp. Polytechnic, Ambala City - 134003	Devinder Sharma	(0171) 25567369
	Haryana	Sonapat	Saibaba Enterprises	House No. 1510, Sector - 15, Sonapat - 131001	Pramod Sharma	(0130) 6411206
	Haryana	Karnal	Jeeves Consumer Services Pvt Ltd.	Shop # 50, Ground Floor, Mayapuri, Rajiv Gandhi Marg/ Near Raj Palace, Meeraghati Chowk, Karnal - 132001	Neeraj Sharma	(0184) 4022201
	Punjab	Mohali	Jeeves Consumer Services Pvt Ltd.	# SCF-4, Basement, The High Land Society, NAV, Baltana, Zirakhpur, Mohali-140603	Shiv Dhandra	(0176) 2652574
	Punjab	Ludhiana	Jeeves Consumer Services Pvt Ltd.	Shop # 18B, Dhyani Singh Commercial Complex, Opp. Bus Stand, Ludhiana - 141001	Gurbeer Singh	(0161) 2444002
	Punjab	Jalandhar	Jeeves Consumer Services Pvt Ltd.	EH-31, Laddowali Road, Opposite Gurudwara, Jalandhar - 144001	Ashok Kumar	(0181) 2221707
	Punjab	Amritsar	Keerat Electronics	Naraingarh Bazar, Shaheed Bhagat Singh Road, Chheharta, Amritsar - 143 001	Sukhdeep / Mantreet Singh	(0183) 2450095
	Himachal	Shimla	Suvidha Electronics	Mehta Niwas, Ground Floor, Near Himfard Building, B C S, New Shimla - 171009	Rajesh Kumar	(0) 9816457886
	Himachal	Mandi	Kuldeep Electro Care	Near FCI Godown, Kehanwal Road, Ram Nagar, Mandi - 175001	Kuldeep Singh	(01905) 222140 / 329574
	Rajasthan	Jaipur	Jeeves Consumer Services Pvt Ltd.	A-79, Subash Nagar Shopping Centre, Jaipur - 302016	Vipendra Singh	(0141) 4035102

## AUTHORIZED SERVICE CENTERS

West	Maharashtra	Mumbai	S P Services	Shop No. 10, Abdul Sattar Compound, Fitwala Road, Opp. Satguru Darshan Bldg., Near Railway Station, Elphinstone Road (West), Mumbai - 400013	Palsingh Panyari	(022) 24326726 / 24312623
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Plot No 27/5, Pawani Chowk, Opp Mulund Darshan Building, Mulund Colony, Mulund (W), Mumbai - 400082	Ramesh Yadav	(022) 65288597
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Shop No.1-1A, Ground floor, Kirti Co-Op Housing Society, Ramachandra Extn Lane, Near Movie Time, Evershine Nagar, Malad(W), Mumbai-400064	Murali Joshi	(022) 65278590
	Maharashtra	Pune	Jeeves Consumer Services Pvt Ltd.	No. 337, Sai Leela, 1st Floor, Datt Wadi, Mhasoba Chowk, Pune - 411030	Saket Dubey	(020) 24321679
	Maharashtra	Nagpur	Technic Services	Khare Building, Hanuman Lane, Sitabuldi, Nagpur - 440 012	Dilip Panda	(0712) 2550076
	Maharashtra	Chandrapur	Suvidha Electronics	No. 1, Devt Appartment, Church Road, Hanuman Nagartukum, Chandrapur - 442401	Subash Deashkar	(07172) 258966 / 256453
	Maharashtra	Kolhapur	Sikir Mobiles	1492 C Ward, Laxmipuri, Opp. TATA Brand Stores, Kolhapur - 416001	Sukir Bakare	(0) 9372555011
	Maharashtra	Aurangabad	Emperor Services	S-5, Manik Arcade Kalda Corner, Opp Chowbey Hospital, Chetna Nagar, Aurangabad -31005	Mr. Willy Bento Colaco	(0240) 2350606
	Maharashtra	Nashik	Harsha Electronics	3, Talak Complex, Rachna Vidyalaya Road, Sharanpur Roda, Nashik - 422002	Pravin Patil	(0) 9422254240
	Goa	Salcete	Jolly Enterprises	Shop # G-2, 78/A Nuvem Enclave, Along NH-17 Highway, Belloy Nuvem, Salcete - 403604	John Gonzanalves	(0832)2791800
	Gujarat	Ahmedabad	Jeeves Consumer Services Pvt Ltd.	No. 37, Om Tower, Near Star Bazar, Jodhpur Cross Road, Satellite, Ahmedabad - 380015	Girish Parmar	(079) 40080485
	Gujarat	Baroda	Uday Refrigeration	G/3 Nandanvan Complex, Atma Jyoti Ashram Road, Behind Citizen Society, Ellora Park, Baroda	Shailesh	(0265) 6590948
	Gujarat	Surat	Sadgurudev	Shop No. L/6, Shankutal Complex, Beside Sangvi Tower, Near Gujarat Gas Circle, Adajan Patia, Surat - 395009	Manoj Rana	(0261) 6540417
	Gujarat	Rajkot	PC Systems	4-Sardar Nagar (West), Tagore Road, Near Astron Circle, Rajkot-360001	Manoj Gohil	(0281) 2480479
	Madhya Pradesh	Indore	Cool Home Refrigeration	LG-70, Trade Centre, 18, South Tukogunj, Indore- 452 001	Husain Anjum	(0731) 4076404
	Madhya Pradesh	Bhopal	Jeeves Consumer Services Pvt Ltd.	Ward no 47, Goyal Vihar, Ground floor, Flat no-G-1, 31-C, Zone-2, MP Nagar, Bhopal	Ram Ashish Prasad	(0755) 4059310

# AUTHORIZED SERVICE CENTERS

South	Tamil Nadu	Chennai	Jeeves Consumer Services Pvt Ltd.	New No.3,Old No.1-A, Sripuram,2nd Lane,Royapetah, Chennai-600014	Dinesh Kumar	044-42632371
	Tamil Nadu	Chennai	G C Services	Old No. 12, New No. 37, 1st Floor, Sattanna Naichen Street, Nehru Timber Market, Choolai, Chennai - 600112	Navai R	(044) 26690084 / 42822868
	Tamil Nadu	Coimbatore	V K Engineering	108-A/92, West Ponnurungam Road, Ground Floor (Near Telephone Exchange), R.S.Puram, Coimbatore - 641002	Selvadurai	(0422) 2541172
	Pondicherry	Pondicherry	Bestronics	49, Saint Theresa Street, Pondicherry - 605001	B Jayashankar	(0) 9443728020
	Andhra Pradesh	Hyderabad	Jeeves Consumer Services Pvt Ltd.	Fiat No. 205, Karan Centre, Opp. IBP Petrol Pump and Karan Hotel, Park Lane, S.D.Road, Near Paradise Circle, Secunderabad - 500003	Kumararajan	(040) 64591168
	Andhra Pradesh	Vijaywada	Jeeves Consumer Services Pvt Ltd.	Door No.25-10-10A,G.S.Raju Road,Gandhi Nagar, Near Gymkhana Road, Vijayawada - 520003	Rahamatullah Gouse Khan	(0866) 6591168
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	No. 126, 1st Floor, 8th Main J.P.Nagar, 3rd Phase, Bangalore - 560078	Ramesh Kumar	(080) 41209331
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	First Floor, Khan Bldg. 7 & 8th Cross, Jakkasandra Extension, Bangalore - 560032	Surulivel	(080) 25520424
	Karnataka	Mangalore	Jeeves Consumer Services Pvt Ltd.	1st Floor, Quadra compound, Bejai,kapikad, Kavoov Road, Mangalore -575004	Divakar Shetty	(0824) 2213699
	Karnataka	Mysore	Jeeves Consumer Services Pvt Ltd.	No.1095, 1st Floor, C&D Block, Lalithadri Road, Kuvempunagar, Mysore - 570023	Venkatesh.S.Kulkarni	(0821) 4191094